
- 1 Bolt
- Battery cover
- 2 3 4 5 6 Nuts
- Bracket
- Electrical connector
- Bolt
- H3/1 Alarm signal siren with additional battery

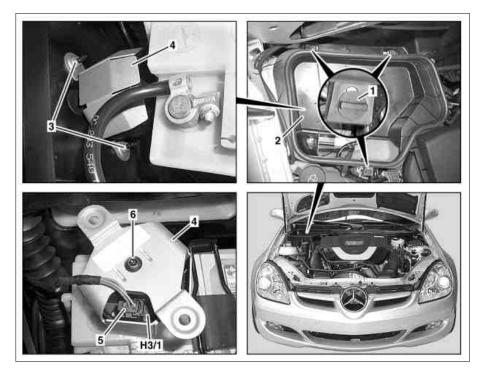

P80.50-2413-06

X	Removal/installation		
1	Open engine hood and raise to vertical position		AR88.40-P-1000V
2	Loosen bolts (1) on battery cover (2) and remove battery cover (2)		
3	Unscrew nuts (3)	Nm	*BA80.50-P-1004-01A
4	Remove alarm signal siren with additional battery (H3/1) with bracket (4) and move upward until electrical connectors (5) are accessible		
5	Disconnect electrical connector (5)		
6.1	Unscrew screw (6) and remove alarm signal siren with additional battery (H3/1) from bracket (4)	When replacing alarm signal siren with additional battery (H3/1).	
		Nm	*BA80.50-P-1003-01A
7	Install in the reverse order		

Nm Anti-theft alarm system

Number	Designation	Model 171
BA80.50-P-1003-01A	Bolt for alarm signal siren with additional Nr battery on bracket	า 14
BA80.50-P-1004-01A	Nut for mount on alarm signal siren with Nr additional battery on firewall stud	n 6